

SET UP MANUAL:



NEST Demo Tunnel
by:



Steve Boyle
Managing Director
33 Southlawn
Witney
OX28 5HY
+44 (0)7949 762820
+44 (0)1993 209098

Steve.boyle@moshondata.com






1. Unfold the tunnel and lay out as flat as possible. Find the inflation tubes, which are both on the same side of the tunnel, one at the front and one at the back. Attach the blowers to the inflation tubes. Make sure all 4 zippers, located two per side are closed.



2. Turn on blowers and inflate tunnel. Using 8 people guide the inflatable during inflation with supplied straps.



2. Once the unit is fully inflated be sure to tie down to stakes or ballasts as shown in following diagram

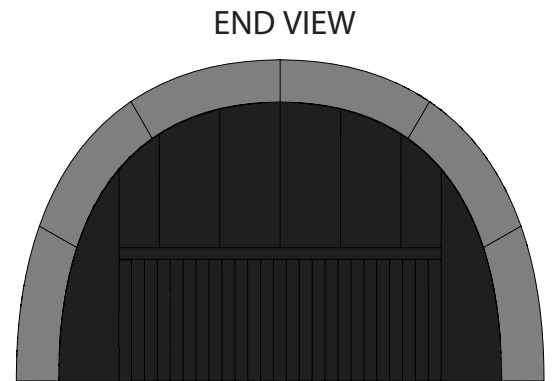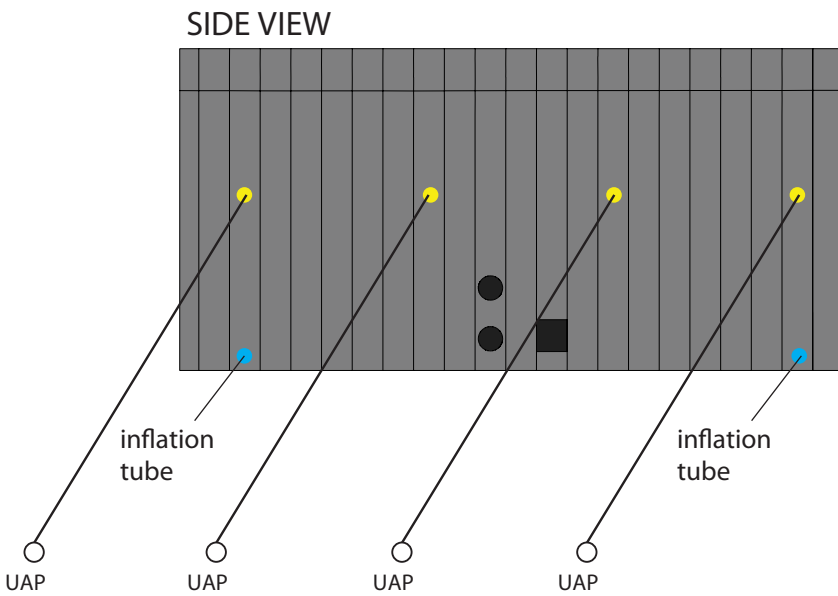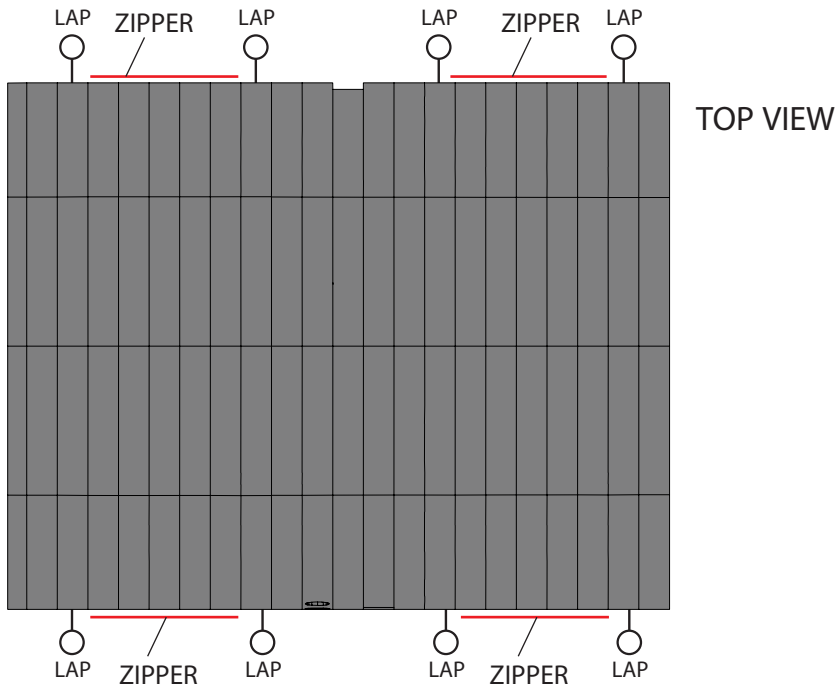

LAP = LOWER PERIMETER ANCHOR POINTS SHOWN ON TOP VIEW ONLY


UAP = UPPER ANCHOR POINT SHOWN ON SIDE VIEW ONLY

INFLATE IN 10 MPH WINDS OR LESS

USE INFLATABLE IN WINDS UP TO 20 MPH, GUSTING 25 MPH, IF NOT


SERIOUS INJURY OR DEATH CAN OCCUR

upper anchor point attachment

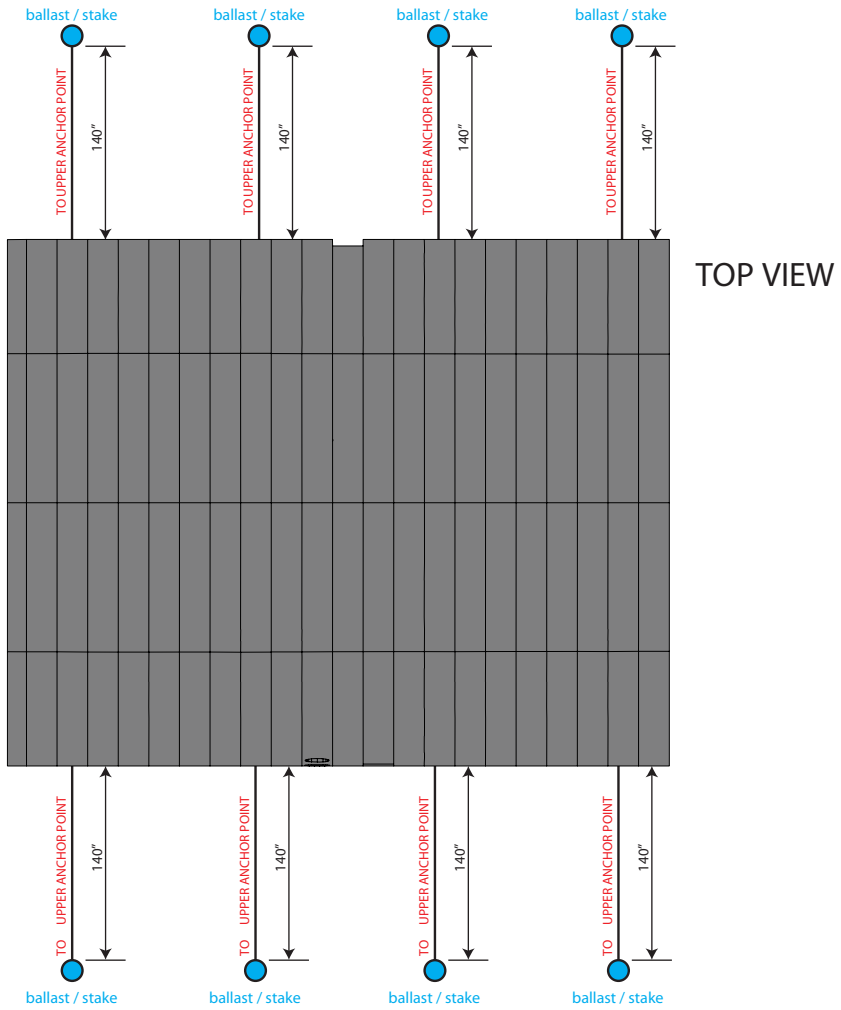

DO NOT ATTEMPT TO SET UP THIS INFLATABLE
IN WINDS GREATER THAN 10 MPH
SERIOUS INJURY OR DEATH CAN OCCUR

lower anchor point attachment

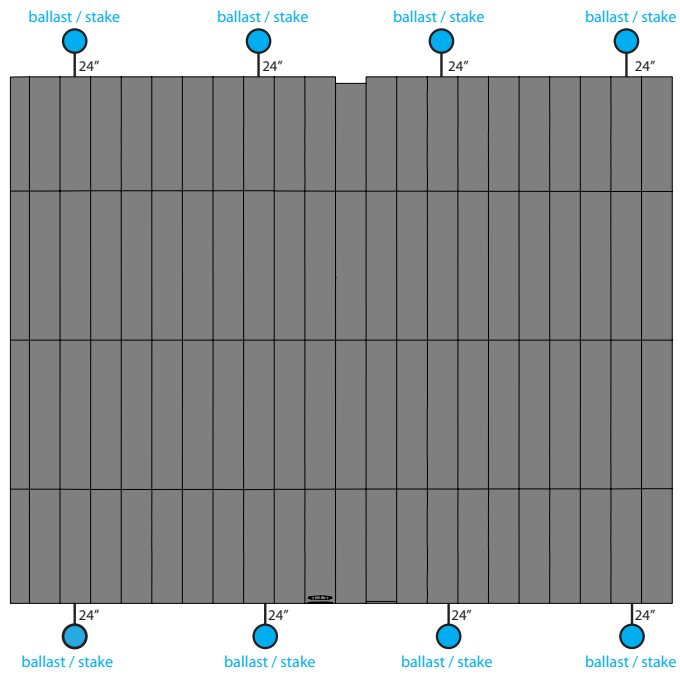

DO NOT ATTEMPT TO SET UP THIS INFLATABLE
IN WINDS GREATER THAN 10 MPH
SERIOUS INJURY OR DEATH CAN OCCUR



pull on handles to release
emergency door



HVAC and exhaust fan ports