

### How to inflate the MD-3D cars

To inflate the main body of the car you will need the 12v pump (supplied)

1. Connect the white adapter as shown here and insert into the valve
2. Connect the other end of the hose to the **OUT** port marked on the pump
3. Now switch the pump on to inflate



To inflate other parts with smaller valves ...

4. Connect the white/black adapter shown here (supplied)
5. Insert into valve make sure it goes all the way through
6. Switch the pump on to inflate



## Attaching and inflating the wheels

7. Use the air compressor on the 12v jump pack supplied
8. Attach the air compressor to the valve in the back of the wheel
9. Inflate the wheel until it takes an even round shape
10. Cable ties have been supplied to attach the wheel using the white mounting points
11. To deflate repeat the first process but switch the pump hose to the **IN** port, please note this can only be done with larger valves. The smaller valves have to be done by hand.

